

Key Master User Manual

Statement:

This handbook is the manual of Key Master. Without the written permission from the manufacturer, any company or individual shall not copy or backup it in any form (electronic, mechanical, photocopying, recording or otherwise). This manual is only operating instructions for Key Master. If any result caused by using it on other equipment, the company does not assume any responsibility for it.

If not quality problems of Key Master, such as equipment failure caused by user abuse or misuse, unauthorized disassembly, repair equipment yourself, not operate or maintain by the instructions, lose it, the repair will not be free. Other product names mentioned in this manual are in order to describe how to use Key Master, and their copyrights are still observed by the original company.

Key Master and files are used for normal vehicles maintenance. If used for illegal purposes, the company does not assume legal responsibility.

Content

Chapter 1 : Summary.....	1
1.1 Features.....	1
1.1.1 Advantages.....	1
1.1.2 Durability.....	1
1.2 Introduction of the device.....	2
1.2.1 The main unit and accessories.....	2
1.3 Hardware technical specification.....	3
1.4 Functions Setting.....	3
1.4.1 Functions Selection.....	4
1.4.2 System Setting.....	4
1.4.2.1 Language Selection.....	5
1.4.2.2 Contrast Control.....	5
1.4.2.3 Font Setting.....	6
1.4.2.4 Metric/Inch.....	6
1.4.2.5 Data Logging.....	7
1.4.3 System Information.....	7
1.4.4 Device Self-test.....	8
Chapter 2: How to update software for Key Master.....	8
2.1 Update Tool software installation.....	8
2.2 Register.....	11
2.3 Software Updating.....	12

Chapter 1: Summary

1.1.Features

1.1.1. Advantages

- Multi-language environment can be applied in different countries and regions.
- The main unit system adopts ARM high speed chip to keep it running fast, stable and anti-jamming.
- Updating via SD card at any moment.
- Modern design and high-definition true color screen realize the integration of automotive industry and electronic information technologies and make auto diagnosis and key programming easier, practical and economical.

1.1.2 Durability

- Integrity structure design makes it crack resistance, shock resistance and durable.
- Industrial design ensures the tool work stably under tough environment, such as high and low temperatures.

1.2 Introduction of the device

1.2.1 The main unit and accessories(Picture as below)



Name	Instruction
Testing cable port	Connect to the main test cable for auto key programming
Display Screen	Show information
F1	Keyboard input option key
F2	Keyboard input option key
Enter	OK
ESC	Exit or give up
Up	Up
Right	To right
Down	Down
Left	To left
SD card slot	To keep diagnostic program or data

1.3 Hardware technical specification

★Dimension: 23.9cm(L)*12cm(W)*3.6cm(H)

★CPU :ARM7

★Power Supply:DC12V


★Operation Power:DC12V

★Operation Temperature: -20~60°C

★Display Screen:320*240 TFT Screen

1.4 Functions Setting

Power on,and then press **ENTER** on the screen,then go to the function setting, setting information as shown below:

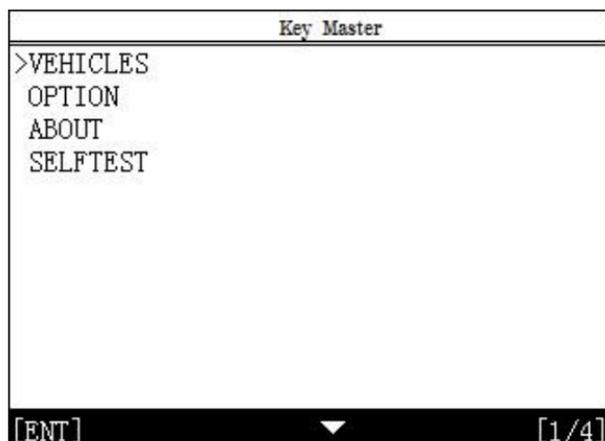

1.4.1 Function Selection

Select different functions according to different requirements.

VEHICLES	
>ABS BLEED	
BATTERY MATCH	
CVT LEARNING VALUE RESET	
EPB(PBM)	
GEAR LEARNING	
IMMOBILISER	
MILEAGE ADJUSTMENT	
OBDII	
OIL/SERVER RESET	
SRS RESET	
STEERING ANGLE RESET	
[ENT] [ESC]	▼▶ [1/13]

Note:Software numbers and functions are different according to different product configuration.Further detailed information,please contact your distributor.

1.4.2 System Setting

Select System Setting,language and contrast can be adjusted, as shown below:

OPTION	
>LANGUAGE	
FONT	
CONTRAST	
METRIC/INCH	
DATA LOGGING	
[ENT] [ESC]	▼ [1/5]


1.4.2.1 Language Selection

This device supports simplified Chinese, traditional Chinese, English, Russia, Greek, Spanish, Italian. In the language directory, select required language by Up and Down and press ENTER to confirm it.



1.4.2.2 Contrast

According to the environment, adjust the brightness of the screen by the left and right buttons, as shown below:

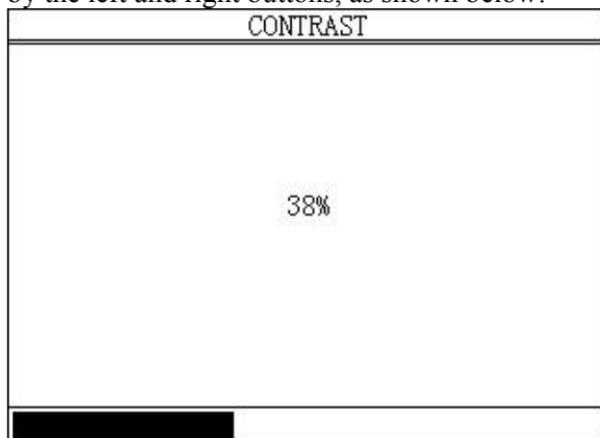

1.4.2.3 Font Setting

According to requirement, select different font.

FONT	
>LARGE	
SMALL	

[ENT] [ESC] ▼ [1/2]

1.4.2.4 Metric/Inch

According to different requirements, select the Metric/Inch by the up and down keys, and press ENTER to confirm as show below,

METRIC/INCH	
>METRIC	
INCH	

[ENT] [ESC] ▼ [1/2]

1.4.2.5 Data Logging

Any problems during testing, please use the Data Logging function to record the test process and send the data to us. Select ON by the up and down keys and press ENTER to confirm, shown as below,



Note: Every time you need to select ON if you want to record the data before testing car.


1.4.3 System Information

System information includes product serial number, hardware version, software version, release date, register password, etc.



1.4.4 Device Self-test

Device self-test includes screen display, keyboard testing, hardware self-testing, etc. If it cannot show enough pictures on the screen, keyboard not work, and hardware self-test not get through, please return this Key Master to the manufacturer.

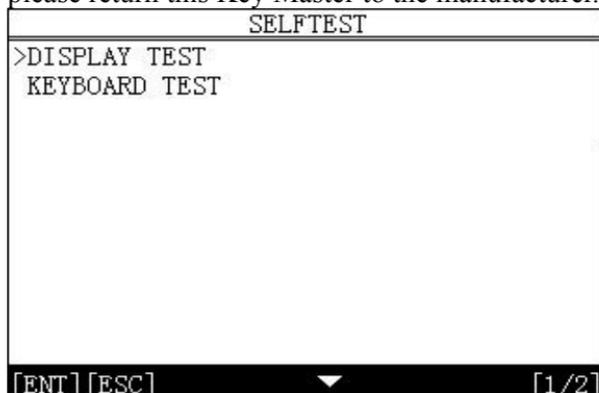

Chapter 2: How to update software for Key Master

2.1 Update tool software installation

Long in our website:<http://en.obdstar.com> and click “One key Upgrade”. Download the update tool and diagnostic software, double click, then go to the next step:


Step 1: Click “Next”



Step 2: Click “Next”




Step 3: Wait for several minutes then the installation finished

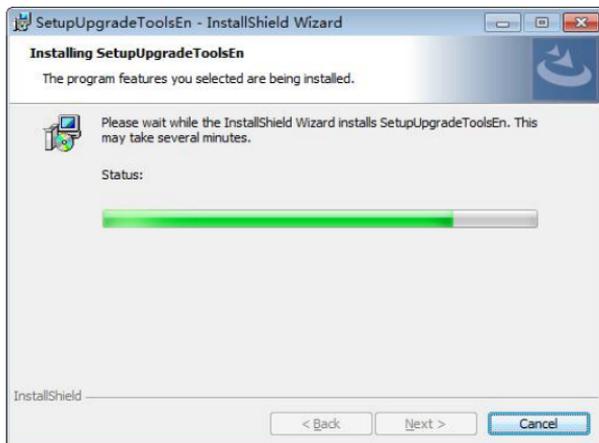

Step 4: Click “Finish”



After Update Tool installation completed, click the Update Tool software icon on desktop to start the update tools. The main interface is as shown below:

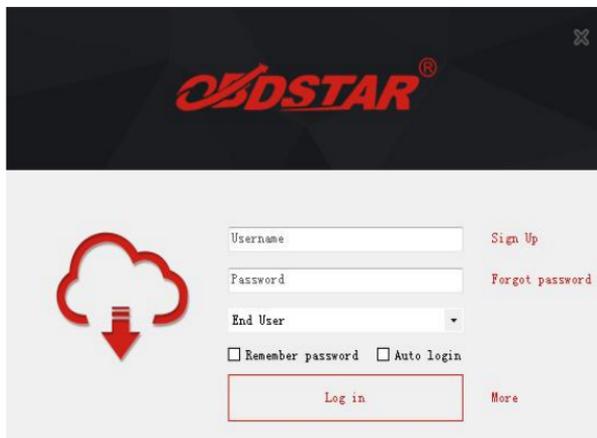

2.2 Register

Click “Sign up” to fill in user information. Username can be English characters or the combination of alphabet and numbers. Serial number and register password can be referred to System information in the device.(Figure 1.4.3)

User Login

Register

Get User && Password

Registered Types Product User

Product serial number: *

Register password: *

Distributor code: *

User name: *

Your password: *

Password: *

Email: *

Contacts: *

Company name: (unnecessary)

Contact address: (unnecessary)

Contact phone number: (unnecessary)

Register

Contact Details:

Tel.: 0089 755 86707161

Email: Leo@obdstar.com

Skype: [obdstar98](#)

Attn: Leo





2.3 Software updating

Operation steps as following:

Step 1: Remove the TF card from your device.

Insert your TF card into computer.

Step 2: Open update tool and login

Step 3: Click the source menu, choose the program you want to update, click it and confirm.

Step 4: Click and select all the software then click “update”.

Step 5: Wait for several minutes then the updating finished.

Product sn: 814388888888 Language: English Memory card: L:\

Select all (Alt+ 2) Format memory card (Alt+ 1) Available memory: 3699M

Refresh (Alt+ 5) Upgrade (Alt+ 3) Cancel

No.	Software Name	The latest version	Current version	Date Time	Select version	Select Language	Progress
1	WISSAN CALCULATOR	8.1	8.1	2017-07-13	8.1	English	OK
2	X-100 PRO DISPLAY	8.5	8.5	2017-07-13	8.5	English	OK
3	AUDI ODO	30.18	30.16	2017-07-13	30.18	English	OK
4	BENTLEY ODO	30.06	30.04	2017-07-13	30.06	English	OK
5	BENZ ODO	30.34	30.32	2017-07-26	30.34	English	OK
6	CHERY IMMO	33.54	33.53	2017-07-13	33.54	English	OK
7	CHRYSLER IMMO	30.58	30.56	2017-07-13	30.58	English	OK
8	CHRYSLER ODO	30.13	30.12	2017-07-13	30.13	English	OK
9	CITROEN ODO	30.65	30.64	2017-07-13	30.65	English	OK
10	EEPROM	30.09	30.07	2017-07-13	30.09	English	OK
11	FIAT IMMO	31.41	31.39	2017-07-26	31.41	English	OK
12	FIAT ODO	30.20	30.16	2017-07-18	30.20	English	OK
13	FORD IMMO	30.08	30.06	2017-07-13	30.08	English	OK
14	FORD ODO	30.04	30.02	2017-07-13	30.04	English	OK
15	GEELY ODO	30.23	30.21	2017-07-13	30.23	English	OK

Account: Sign out Upgrade progress: 0% Number of selected software:68

Note: For new update software and questions during updating, please contact your distributor.